


TEK811/811R Battery Replacement Instructions



The power of data. **Optimized.**

Battery Replacement

- 1 Remove four screws on bottom of monitor and remove cover.
- 2 Remove used batteries from holders. Take note of orientation of batteries.
- 3 Replace with new batteries.
- 4 Reposition O-ring so it sits in channel around cover.
- 5 Line up connectors on cover and bottom half of monitor and press together.
- 6 Retighten screws.

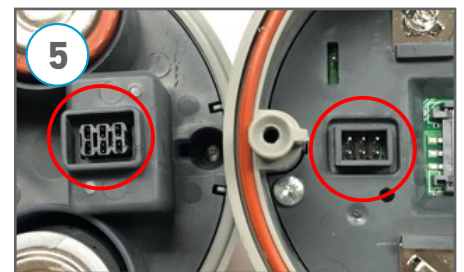

Do not send used batteries to ATEK. Dispose of them in accordance with local guidelines and regulations.

**For questions or problems –
Contact TankScan Technical Support,
877-847-7226**

223-0197-000 Rev. A 11/21



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

10025 Valley View Road, Ste. 190
Eden Prairie, MN 55344 U.S.A.
www.atekaccess.com

Email: CCT@tankscan.com
Sales & Order Processing: 800-523-6996
Technical Support: 877-847-7226



Access the power of technology.

©2021 ATEK Access Technologies, LLC. All Rights Reserved. TankScan images and marketing materials are protected by various patents, copyrights and/or trademarks. ATEK assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of ATEK are granted by the Company in connection with the sale of TankScan products, expressly or by implication.