

TSU Battery Replacement Instructions




The power of data. **Optimized.**

WARNING – EXPLOSION HAZARD: Remove monitor from tank and take to unclassified/non-hazardous area before removing enclosure cover.

Tools Required: 9/64 in. hex wrench

- 1 Unscrew four retaining screws using hex wrench and remove enclosure cover.** Take note of enclosure cover orientation relative to green dots on both cover and base.
- 2 Disconnect battery cable from printed circuit board and remove used battery.**
- 3 Insert new battery into holder and reconnect battery cable.** Ensure battery's wiring is not pinched when cover is re-installed.
- 4 Apply lubricant from packet to cotton swab and coat enclosure base's gasket.**
- 5 Press WAKE button.** This will wake up the monitor and send a report which will take several seconds to complete. Confirm LED indicator activity per the Monitor Status Chart below.
- 6 Position enclosure cover over base and align green dots then seat cover onto base and secure with retaining screws.** Tighten screws completely to ensure a water tight seal between enclosure cover and base.
- 7 Contact TankScan Technical Support, 800-523-6996, if you have questions or experience problems.**

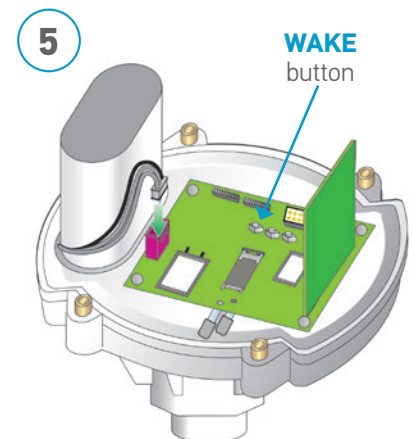

Monitor Status Chart

The network and battery LEDs will glow indicating the status of the monitor.

LED	COLOR AND LIGHT PATTERN	DESCRIPTION
Battery LED	Blink Red	Battery Health - Weak
	Blink Blue	Battery Health - Strong
Cellular LED	Blink Red	Not Registered to the Cellular Network
	Blink Blue (1 second ON - 1 second OFF)	Registered to the Cellular Network
	Glow Blue (for 3 seconds)	Data has been Successfully Sent

For configuration assistance, call TankScan Technical Support, 800-523-6996.

223-0164-000 Rev. A 4/17

ATEK Access Technologies
10025 Valley View Road, Ste. 190
Eden Prairie, MN 55344 U.S.A.

PH: 1.800.523.6996
FAX: 1.800.589.3705
+1.218.829.9797

www.atekaccess.com



Access the power of technology.