# **VEGA Radar Monitor** Setup Instructions



## **Test Connection**



Prior to installing on a tank, select a spot near tank you are installing. Hold provided magnet over TankScan Technical Support label and move it up towards housing lid. Monitor will activate and connect to cellular. Contact TankScan Technical Support to confirm monitor has activated and a connection attempt was successful.

## Take Measurements



Remove any equipment from tank port to be used by monitor. VEGA monitor can be connected directly to tanks with a 1.5" NPT threaded opening. If tank has a 2" threaded opening, use optional adapter if provided.



Measure total height (A) from inside bottom of tank to top of tank port. Record and report measurement to TankScan Technical Support.

Total Height: \_\_\_\_\_

#### Mount Monitor to Tank



Seal pipe threads of monitor using product appropriate for this application prior to tightening into tank port.

Screw monitor into tank port and hand tighten until secure.

#### Take Level Measurement




Hold provided magnet over TankScan Technical Support label and move it up towards housing lid. Monitor will take a level reading and then report to AquaPhoenix Intelligence Platform (AIP).



Confirm monitor reading is correct on AIP or call TankScan Technical Support to confirm reading.

**NOTE:** Step 6 must be completed to ensure monitor is functioning properly.



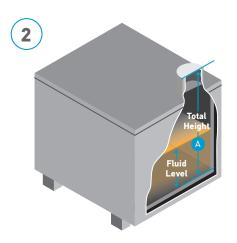

For questions or problems, **Contact TankScan Technical Support** 877-847-7226



223-0203-000 Rev. B 7/23/2025 WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

AguaPhoenix Scientific 860 Gitts Run Road

PH: 877-847-7226

www.tankscan.com

