TEK811/811R Battery Replacement Instructions




Battery Replacement

- Remove four screws on bottom of monitor and remove cover.
- Remove used batteries from holders. Take note of orientation of batteries.
- Replace with new batteries.
- Reposition 0-ring so it sits in channel around cover.
- **5** Line up connectors on cover and bottom half of monitor and press together.
- Retighten screws.





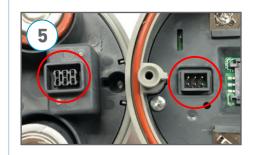

For questions or problems –
Contact TankScan Technical Support,
877-847-7226

223-0197-000 Rev. B 7/10



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

AquaPhoenix Scientific 860 Gitts Run Road Hanover PA 17331

PH: 877-847-7226

www.tankscan.com

